

**Agilent 16440A  
SMU/Pulse Generator  
Selector**

**User's Guide**



**Agilent Technologies**

# Notices

© Agilent Technologies 1994 - 2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

## Manual Part Number

16440-90000

## Edition

Edition 1, February 1994  
Edition 2, April 1995  
Edition 3, August 1997  
Edition 4, January 2000  
Edition 5, November 2007

Agilent Technologies, Inc.  
5301 Stevens Creek Blvd  
Santa Clara, CA 95051 USA

## Warranty

**The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.**

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as

defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.



This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/ electronic product in domestic household waste.

Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a "Monitoring and Control instrumentation" product.

Do not dispose in domestic household waste.

To return unwanted products, contact your local Agilent office, or see [www.agilent.com/environment/product/](http://www.agilent.com/environment/product/) for more information.

---

## Safety Summary

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual may impair the protections provided by the equipment. In addition, it violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies, Inc. assumes no liability for customer's failure to comply with these requirements.

- *GROUND THE INSTRUMENT*

This is Safety Class I instrument. To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The power terminal and the power cable must meet International Electrotechnical Commission (IEC) safety standards.

- *DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE*

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

- *KEEP AWAY FROM LIVE CIRCUITS*

Operation personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

- *DO NOT SERVICE OR ADJUST ALONE*

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

- *DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT*

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Agilent Technologies Sales and Service Office for services and repair to ensure that safety features are maintained.

- *DANGEROUS PROCEDURE WARNINGS*

Warnings, such as example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

---

### WARNING

**Dangerous Voltage, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.**

---

## Safety Symbols

The general definitions of safety symbols used on equipment or in manuals are listed below.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.



Indicates dangerous voltage and potential for electrical shock. Do not touch terminals that have this symbol when instrument is on.



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Indicates earth (ground) terminal.



Alternating current.



Direct current.



ON (Supply).



OFF (Supply).



STANDBY (Supply).

CAT I Means INSTALLATION CATEGORY I. Measurement terminals on the rear panel comply with INSTALLATION CATEGORY I.

---

### WARNING

The warning sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personal.

---

### CAUTION

The caution sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

---





Agilent 16440A SMU/Pulse Generator Selector is one of the accessories available for Agilent 4155/4156 Semiconductor Parameter Analyzers and Agilent B1500A Semiconductor Device Analyzer. The selector is for automatically switching the measurement resource that is connected to a DUT pin. The measurement resource can be SMU, PGU, or SPGU.

This manual consists of the following sections.

- “Introduction”
- “Operation”
- “Installation”
- “Maintenance”
- “Specifications”

---

**NOTE****To Use the Selector**

The 4155/4156 must be equipped with Agilent 41501 SMU/pulse generator expander that contains two PGUs.

The B1500A needs Agilent 16445A selector adapter.

---

---

**NOTE****Inspecting the 16440A upon Receiving**

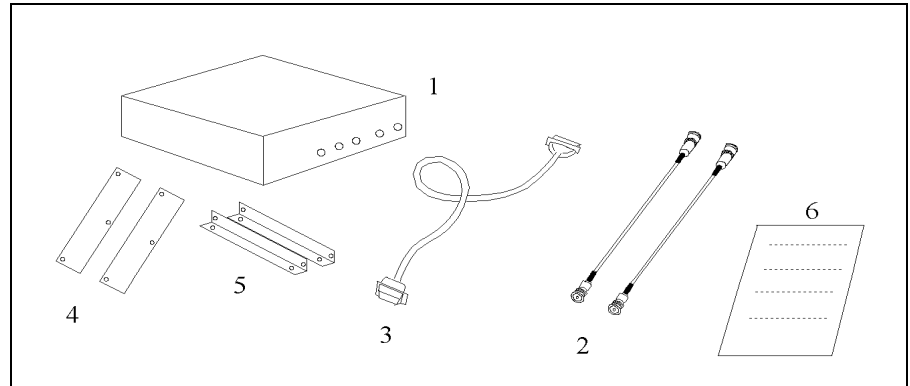
When the 16440A arrives at your site, make sure that nothing is missing or damaged. Unpack the carton, then check the contents against figure and table shown in “Introduction”.

If anything is missing or damaged, contact your nearest Agilent Technologies sales office.

---

## Introduction

The 16440A selector contains the following accessories.



	Description	Agilent Part Number	Quantity
1	SMU/Pulse Generator Selector	16440A	1
2	40 cm triaxial cable	04155-61605	2
3	1.5 m control cable (16440A-001)	04155-61612	1
	3 m control cable (16440A-002)	04155-61611	1
	40 cm control cable (16440A-003)	04155-61608	1
4	plate <sup>a</sup>	16440-60001	2
5	angle <sup>b</sup>	16440-60002	2
6	<i>User's Guide</i> <sup>c</sup>	16440-90005	1

a. Three screws are furnished for each plate.

b. Furnished with 16440A-001/002. Two screws are also furnished for each angle.

c. This document. Furnished with 16440A-001/002.

## Operation

The selector provides the automatic switching capability of the measurement resource SMU or PGU connected to a DUT terminal. This is useful for performing reliability testing (stress testing) of DUTs. For example, the selector can connect a PGU to the DUT for forcing ac stress, then can switch and connect an SMU for measuring dc characteristics.

The selector has the channels CH 1 and CH 2 which provide the following conditions.

**CH 1** All open (no connection), SMU on, PGU on, and PGU open

**CH 2** All open (no connection), SMU on, and PGU on

The PGU open is available only for the CH 1, and is made by keeping the PGU side mechanical relay close and opening the semiconductor relay. This is effective for frequent switching applications such as endurance tests of flash memory because the semiconductor relay is more durable than mechanical relays.

If you want to add two more channels for a total of four, you can order another 16440A, which is called the “selector expander”. The selector and selector expander have identical circuits. The only difference is the channel naming. The selector has CH 1 and CH 2, and the selector expander has CH 3 and CH 4.

- Controlling the selector by using the 4155/4156

Selector connections can be set by using the SMU/PG SELECTOR table on the STRESS: CHANNEL DEFINITION screen. See the 4155/4156 *Setup Screen Reference* manual.

The switching state specified in the STRESS column is automatically performed during stressing. The switching state specified in the MEASURE column is automatically performed during measurement.

For example, you can specify to connect the PGU to the DUT during stress, and connect the SMU to the DUT during measurement. So, when you press the **Stress** key, the PGU is automatically connected to the DUT. And when you press a measurement key, the SMU is automatically connected to the DUT.

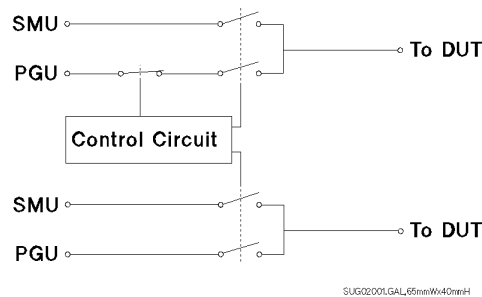
- Controlling the selector by using the B1500A

Selector connections can be set by using the SMU/PG Selector tab screen of the Configuration window. And the PGU open can be set by using the Advanced window of the Measurement Setup. See the B1500A *User's Guide*.

If the *Input/Output Path* is set to *Normally PGU (AUX)* in the SMU/PG Selector tab screen, the selector performs automatic switching in every test. The selector channel normally makes the “PGU on” state and makes the “SMU on” state only for the test which uses the SMU connected to the *Input SMU* terminal.

If the *Semiconductor Relays* on the Advanced window is set to *PGU OPEN*, the selector channel makes the “PGU open” state during the test.

- Simplified circuit diagram



This figure shows a simple circuit diagram of the selector (selector expander).

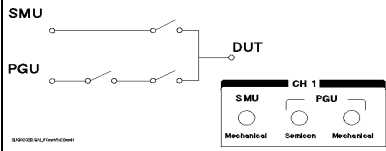
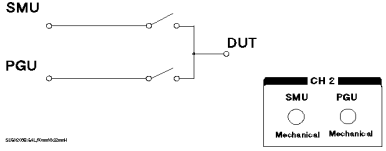
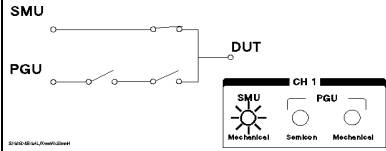
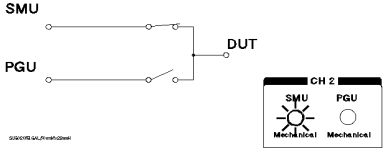
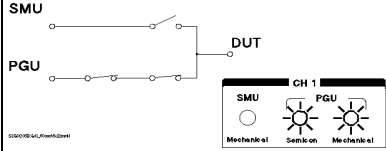
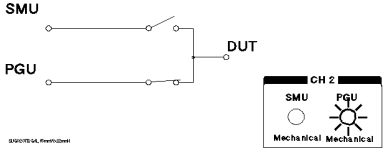
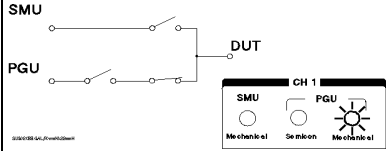
The CH 1 and CH 3 circuits are different from the CH 2 and CH 4 circuits. Each channel has one mechanical relay for SMU and one mechanical relay for PGU, but the CH 1 and CH 3 circuits also have a semiconductor relay for PGU. The relays are controlled by the 4155/4156/B1500A via the control circuit.

The semiconductor relay is useful when you need to perform a lot of switching (for example, read/write tests of flash ROM) because the semiconductor relay is more durable than mechanical relays.

CH 1 and CH 3 can have four switching states: all open, SMU on, PGU on, and PGU open. CH 2 and CH 4 can have three switching states: all open, SMU on, and PGU on.

User's Guide  
Operation

- Switching state


States	CH 1 and CH 3	CH 2 and CH 4
All open		
SMU on		
PGU on		
PGU open		

The switching state of a channel is indicated by the green LEDs on the selector front panel. This table shows the relation of the relays and the LEDs for each switching state.

The “PGU open” state is useful if a lot of switching needs to be performed. When the switching state changes from “PGU on” to “PGU open”, only the semiconductor relay switches. This reduces the amount of times the mechanical relay is switched. The semiconductor relay has a much longer switching life than the mechanical relay.

- Connecting two selectors

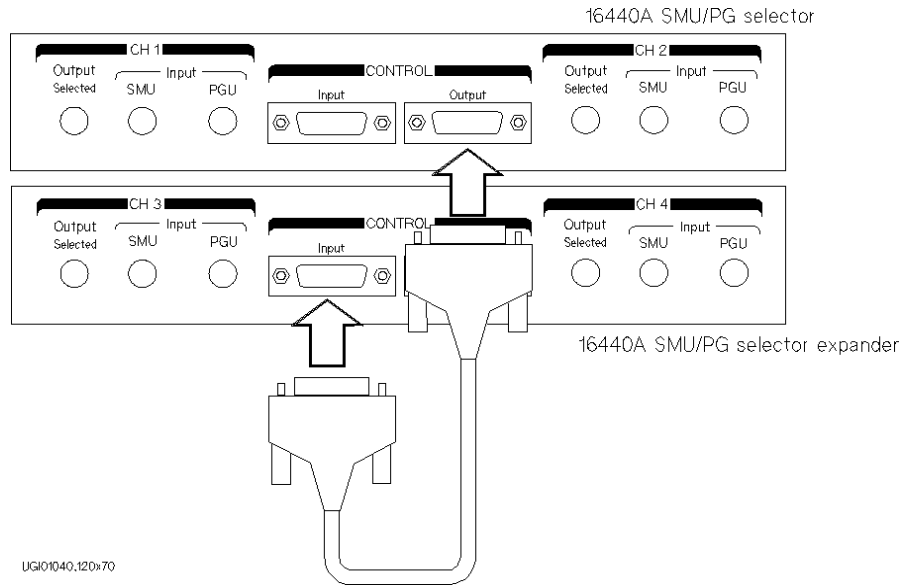
If you use two selectors to have four channels, connect the CONTROL Output terminal of the selector to the CONTROL Input terminal of the second selector using a 40 cm control cable as shown below.



User's Guide  
Operation

- Connecting the selector to the 4155/4156

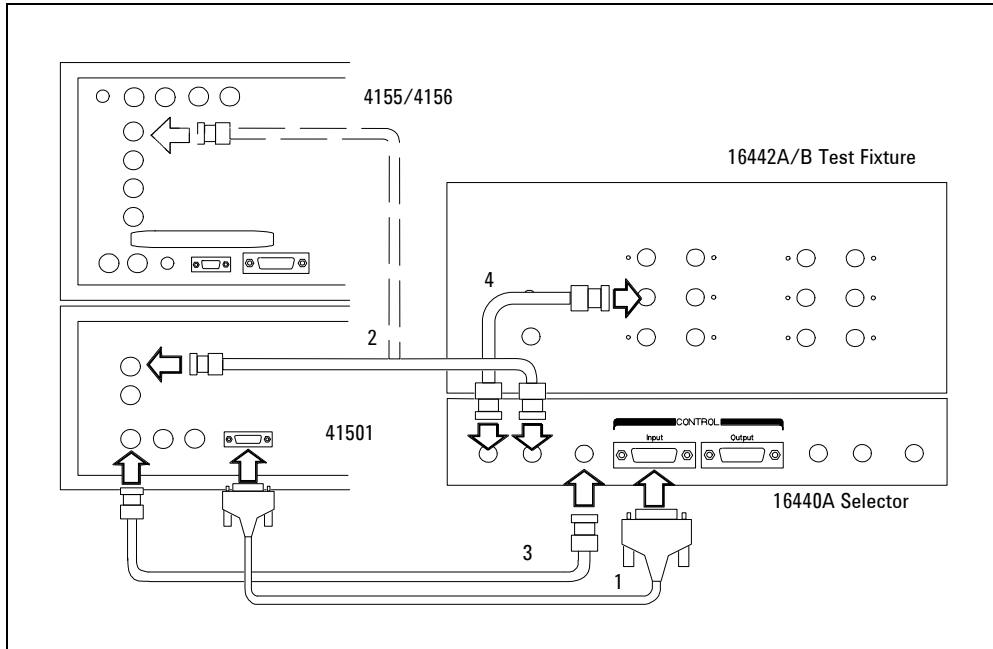Turn off the 4155/4156 and 41501 before connecting the instruments. Then connect as shown below.




16440A terminal	Cable	Connect to
CONTROL Input	16440A-001/002 Control cable	41501 To SMU/Pulse Generator Selector Interface
Input SMU <sup>a</sup>	3.0 m or 1.5 m Triaxial cable	4156 HRSMU Force
		4155 MPSMU Force
		41501 MPSMU or HPSMU Force
Input PGU <sup>a</sup>	3.0 m or 1.5 m Coaxial cable	41501 PGU
Output Selected <sup>b</sup>	40 cm Triaxial cable	DUT interface (16442A or connector plate)

- You can use two inputs for one selector, and four inputs for two selectors.
- You can use two outputs for one selector and four outputs for two selectors. Selector output is either one of the PGU outputs or the SMU output.

- Connecting the selector to the B1500A

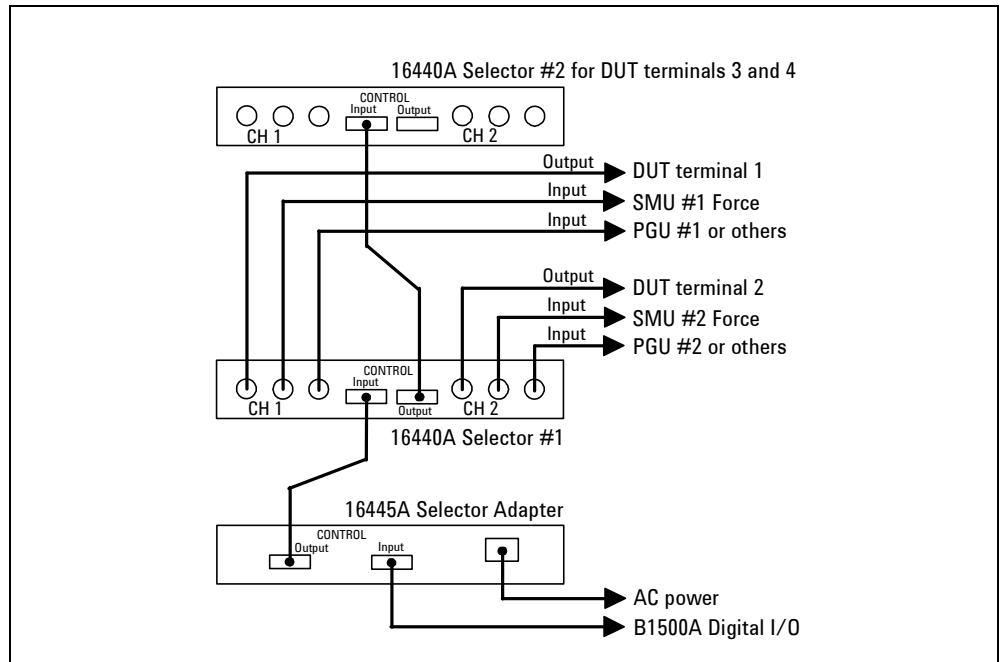Turn off the B1500A before connecting the instruments. Then connect as shown below.



16440A terminal	Cable	Connect to
CONTROL Input	16440A-003 Control cable	16445A CONTROL Output
16445A CONTROL Input	16445A-001/002 Control cable	B1500A Digital I/O
Input SMU <sup>a</sup>	3.0 m or 1.5 m Triaxial cable	B1500A MPSMU Force
		B1500A HRSMU Force
		B1500A HPSMU Force
Input PGU <sup>a</sup>	3.0 m or 1.5 m Coaxial cable	B1500A SPGU Output
Output Selected <sup>b</sup>	40 cm Triaxial cable	DUT interface (16442A or connector plate)

a. You can use two inputs for one selector, and four inputs for two selectors.





b. You can use two outputs for one selector and four outputs for two selectors. Selector output is either one of the PGU outputs or the SMU output.

## Installation

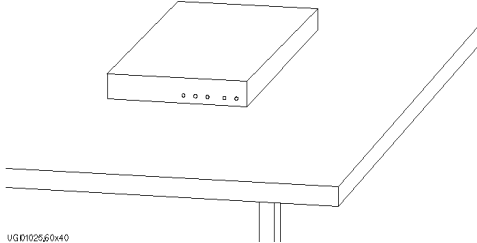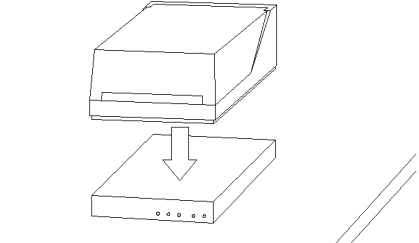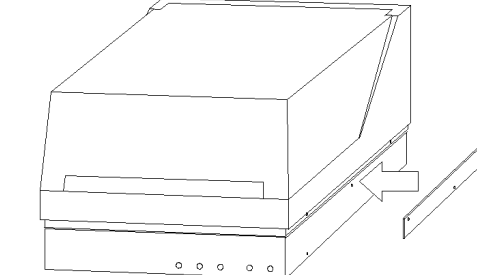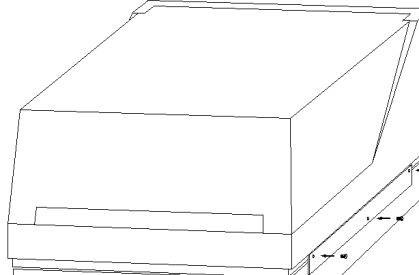This section describes how to attach the selector to Agilent 16442A test fixture or to a shielding box.

### To Attach the Selector to Test Fixture




You can attach your selector to the 16442A test fixture. You need a standard screwdriver.

1. Place the selector on your workbench.	2. Place the test fixture on top of the selector.
 <p>UG01025, E0x40</p>	 <p>UG01025, E0x40</p>
3. Position a plate on both sides.	4. Attach each plate using the three flathead screws supplied with the instrument.
 <p>US01027, E0x40</p>	 <p>UG01025, E0x40</p>

**NOTE**

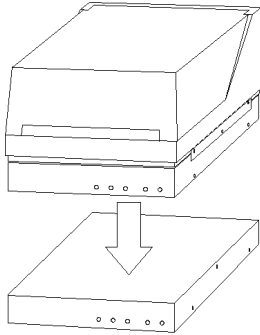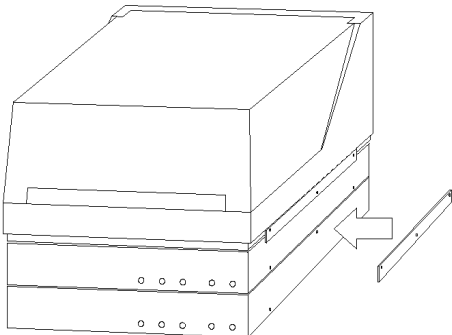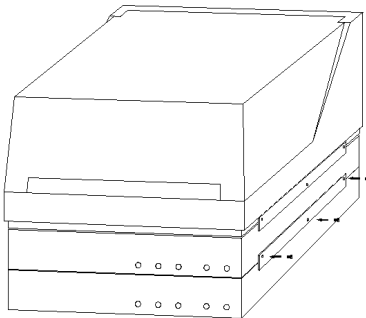If you use the 16445A selector adapter, fix it under the selector by similar method.

The following steps apply when using two selectors.


<p>5. Place the second selector on your workbench. Place the selector and the test fixture on top of the second selector.</p>	 <p>The diagram shows a selector unit being lowered onto a flat workbench. A large downward-pointing arrow indicates the direction of movement. The selector unit has a top cover and a front panel with four circular indicators. The workbench is a simple rectangular block with four circular holes on its front face. A small reference number 'V16445A-00040' is visible at the bottom left of the diagram.</p>
<p>6. Position a plate on both sides.</p>	<p>7. Attach each plate using the three flathead screws supplied with the instrument.</p>
 <p>The diagram shows the selector unit with a rectangular plate being slid into place on its right side. An arrow points from the plate towards the selector. The selector unit has a top cover and a front panel with two rows of four circular indicators. A small reference number 'V16445A-00040' is visible at the bottom left of the diagram.</p>	 <p>The diagram shows the selector unit with two rectangular plates attached to its left and right sides. The plates are secured to the selector's frame. The selector unit has a top cover and a front panel with two rows of four circular indicators. A small reference number 'V16445A-00040' is visible at the bottom left of the diagram.</p>

**NOTE**

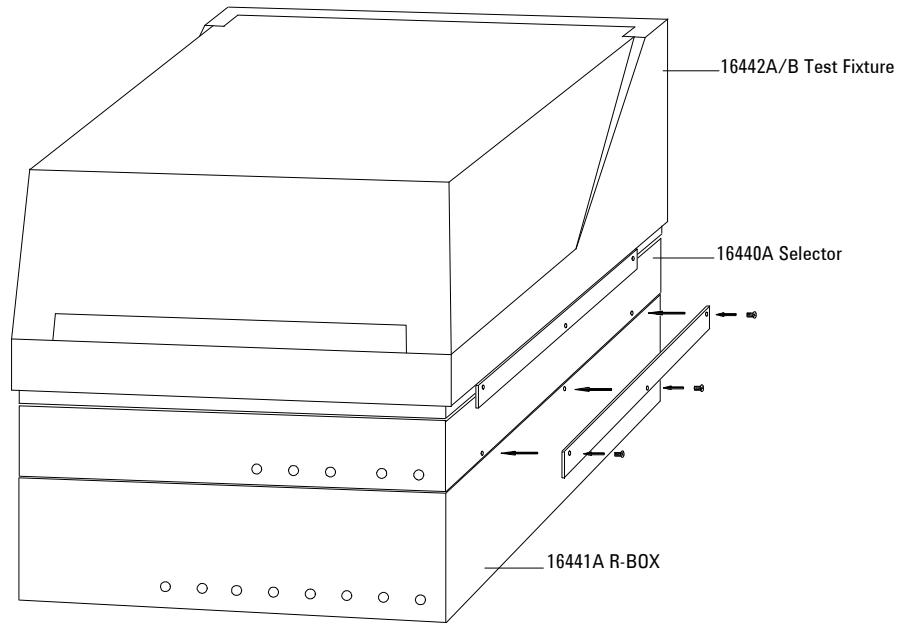If you use the 16445A selector adapter, fix it under the selector by similar method.

User's Guide  
Installation

If you use the 16441A R-box, attach the R-Box to the selector as shown below.




**NOTE**

If you use the 16445A selector adapter, fix it under the R-box by similar method.

## To Attach the Selector to Shielding Box

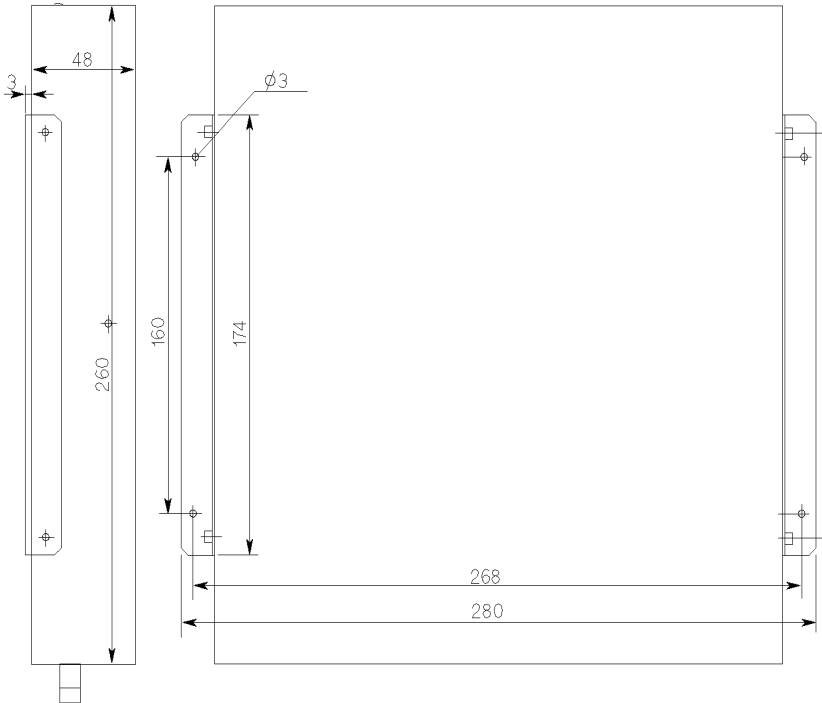You can attach your selector to a shielding box. You need a standard screwdriver. The following figure shows the spacing of the 16440A screw holes. You need to prepare four screws and nuts to match the screw holes.







Units: mm

SUG0102, 020mm#x100mmH

User's Guide  
Installation

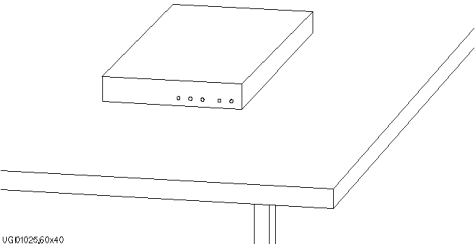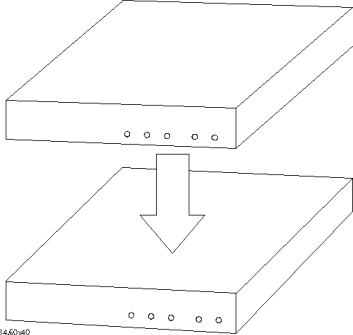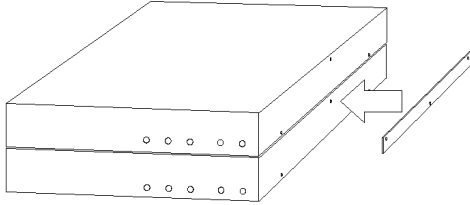
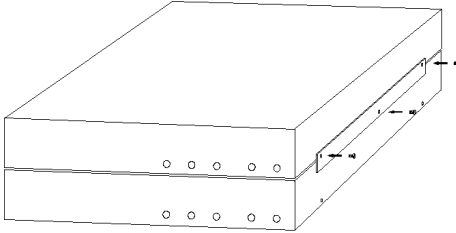
If you use two selectors, connect selectors before attaching to the shielding box, as shown below.

<p>1. Place the selector on your workbench.</p>	<p>2. Place the second selector on top of the selector.</p>
 <p>UG01025660x40</p>	 <p>UG0103460x40</p>
<p>3. Position a plate on both sides.</p>	<p>4. Attach each plate using the three flathead screws supplied with the instrument.</p>
 <p>UG0103660x40</p>	 <p>UG0103660x40</p>

**NOTE**

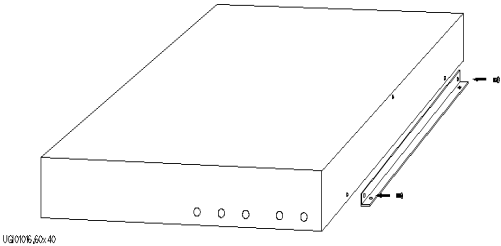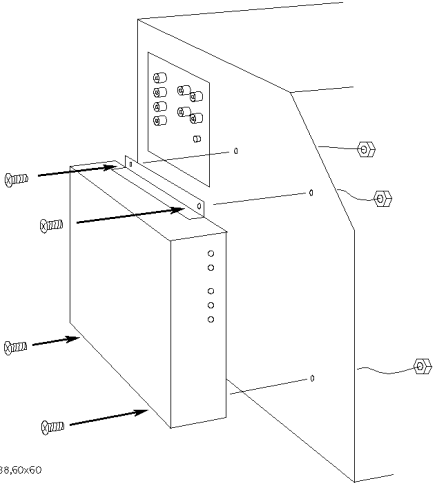If you use the 16445A selector adapter, fix it on top of the selector by similar method.


Attach the selector to the shielding box as shown below.

<p>1. Attach an angle bracket to each side of the selector, using the screws supplied.</p>	
 <p>UG10106,60-40</p>	
<p>2. Place the selector(s) on the side panel of the shielding box.</p> <p>3. Position four nuts on the inside panel of the shielding box.</p> <p>4. Attach the angle bracket to the shielding box using four flathead screws.</p>	 <p>UG10103,8,60-60</p>

## User's Guide
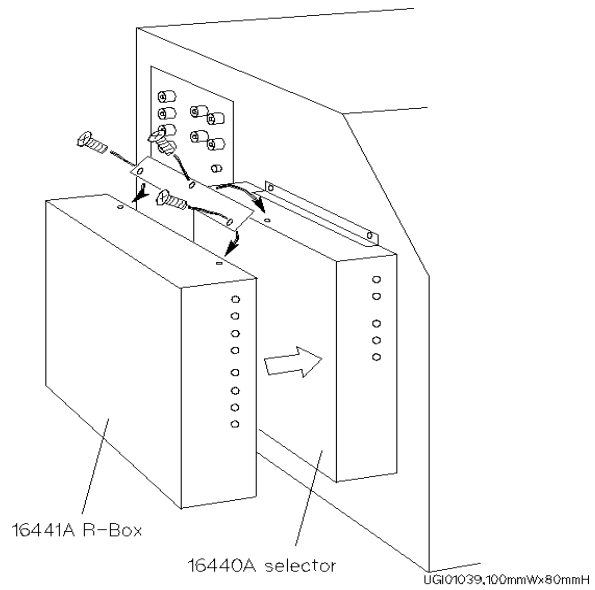
### Installation

If you use the 16441A R-box, attach the R-Box to the selector on the shielding box as shown below.



---

## Maintenance

This section provides the following maintenance information.

- Cleaning
- Servicing

### Cleaning the Selector

To maintain high performance, the selector must be kept clean. Oil, perspiration, hair, dust, and dirt will degrade the board insulation, which increases leakage current and decreases measurement accuracy.

Agilent Technologies recommend the following cleaning procedure.

1. Make sure that voltage or current is *not* present at any channel.
2. Disconnect all cables from the selector.
3. Using lint-free paper, gently wipe the chassis. For any area that will not come clean, dip the lint-free paper into alcohol and wipe the area gently.

### Servicing the Selector

This section provides information for trained service personnel to repair the selector.

When a replaceable part, which is shown with the Agilent part number in this section, needs to be replaced, order the parts from the nearest Agilent Technologies Sales and Service Office.

---

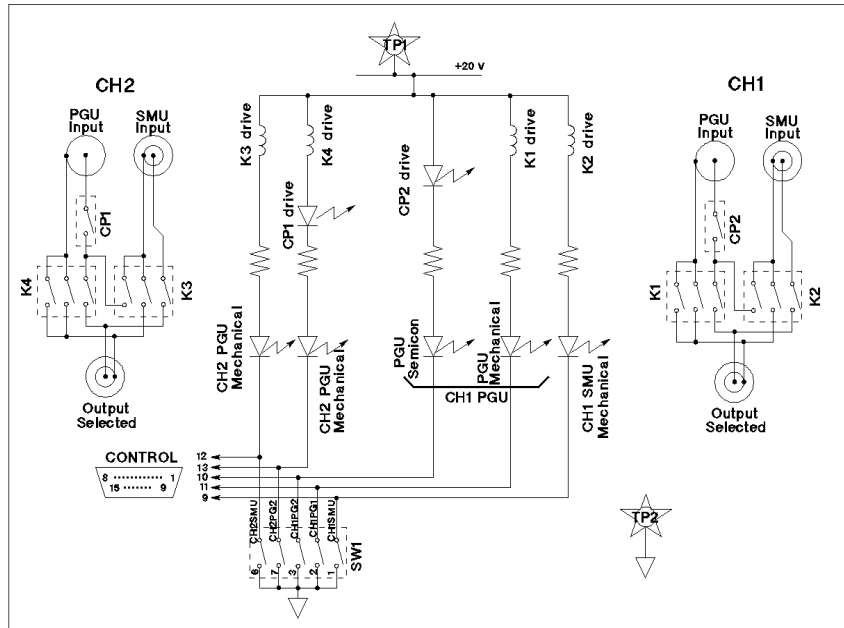
#### WARNING

---


**High voltages may be present in the selector when voltage or current is applied. Be careful to avoid electric shock.**

Before you repair the selector, make sure that terminals are not connected to any instrument.

## Circuit Block Diagram



## Replaceable Parts

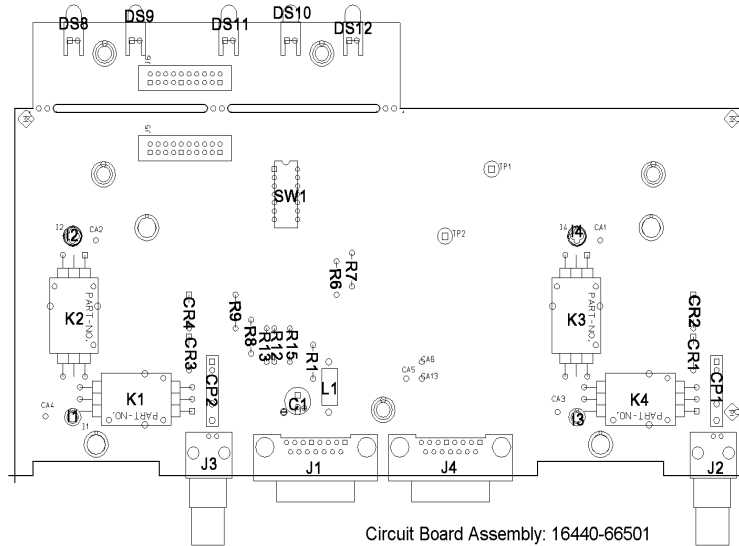

When soldering, use low hydrochloric acid solder (Agilent part number: 8090-0433) to prevent the flux in the solder from spreading unnecessarily, and make sure that adjacent terminals are not bridged. After soldering, make sure that there are no lint bridges, which would increase the leakage current.

Reference Designation	Agilent Part Number	Description
R1	0757-0442	Resistor 10 k $\Omega$ , 1%, 0.125 W
R6	0698-3440	Resistor 196 $\Omega$ , 1%, 0.125 W
R7	0757-0402	Resistor 110 $\Omega$ , 1%, 0.125 W
R8	0698-3440	Resistor 196 $\Omega$ , 1%, 0.125 W
R9	0698-3440	Resistor 196 $\Omega$ , 1%, 0.125 W
R12	0698-0085	Resistor 2.61 k $\Omega$ , 1%

Reference Designation	Agilent Part Number	Description
R13	0698-0085	Resistor 2.61 k $\Omega$ , 1%
R15	0757-0279	Resistor 3.16 k $\Omega$ , 1%
CR1	1901-0050	Diode
CR2	1901-0050	Diode
CR3	1901-0050	Diode
CR4	1901-0050	Diode
L1	9140-0210	Inductor 100 $\mu$ H $\pm$ 5%
C1	0180-3468	Capacitor 47 $\mu$ F 50 V
CP1	1990-1625	Opto-isolator
CP2	1990-1625	Opto-isolator
K1	0490-1791	Reed Relay
K2	0490-1791	Reed Relay
K3	0490-1791	Reed Relay
K4	0490-1791	Reed Relay
DS8	1990-0967	LED Green
DS9	1990-0967	LED Green
DS10	1990-0967	LED Green
DS11	1990-0967	LED Green
DS12	1990-0967	LED Green
J1	1252-1481	Connector
J2	1250-1842	Connector BNC
J3	1250-1842	Connector BNC
J4	1252-1481	Connector
SW1	3101-2885	Switch - DIP
I1	0360-1641	Terminal
I2	0340-0060	Terminal
I3	0360-1641	Terminal
I4	0340-0060	Terminal

## Specifications

The “supplemental information” and “typical” entries, in the following specifications are not warranted, but provide useful information about the functions and performance of the instruments.

The following specifications data is specified at  $23 \pm 5$  °C and 50 % relative humidity.

- Function

Agilent 16440A switches either a SMU or PGU to the associated output port. You can expand to 4 channels by adding an additional 16440A. The channel 1 PGU port provides “PGU OPEN” function, which can disconnect the PGU by opening a semiconductor relay. The 16440A can not work without Agilent 4155/4156 with 41501A/B-402/412/422 or Agilent B1500A with 16445A.

- Channel configuration: 2 channels (CH1 and CH2). Can add additional 2 channels (CH3 and CH4) by adding another 16440A (selector expander).

	Input	Output
Channel 1 (CH 1)	2 (SMU and PGU)	1
Channel 2 (CH 2)	2 (SMU and PGU)	1
Channel 3 (CH 3) <sup>a</sup>	2 (SMU and PGU)	1
Channel 4 (CH 4) <sup>a</sup>	2 (SMU and PGU)	1

a. These channels are available when an 16440A SMU/PG selector expander is installed.

- Voltage and current range

Input port	Maximum Voltage	Maximum Current
SMU	200 V	1.0 A
PGU	40 V	0.2 A <sup>a</sup>

a. This is peak-to-peak ac current.

## User's Guide

### Specifications

- Accessories (furnished). See Section 1 for details.
  - Option 001
    - 1.5 m control cable (Agilent part number 04155-61612)
    - 40 cm triaxial cable (Agilent part number 04155-61605)
  - Option 002
    - 3.0 m control cable (Agilent part number 04155-61611)
    - 40 cm triaxial cable (Agilent part number 04155-61605)
  - Option 003
    - 40 cm control cable (Agilent part number 04155-61608) for connecting selector to selector expander
    - 40 cm triaxial cable (Agilent part number 04155-61605)

- General specifications

- Environment

Operating temperature	5 °C to 40 °C
Storage temperature	–40 °C to 70 °C
Operating Humidity	5 % to 80 % relative humidity (at no condensation)
Storage Humidity	5 % to 90 % relative humidity at 65 °C

- Weight

- Approximately 1.1 kg (2.43 lb)

## Supplemental Information

The following reference data is specified at  $23 \pm 5 \text{ }^\circ\text{C}$  ( $73 \pm 9 \text{ }^\circ\text{F}$ ) and 50 % relative humidity.

- SMU channel
 

<b>Leakage current</b>	less than 100 fA at 100 V
<b>Residual resistance</b>	0.2 $\Omega$ typical
<b>Stray capacitance (force common)</b>	0.3 pF typical at 1 MHz
<b>Stray capacitance (force guard)</b>	15 pF typical at 1 MHz
<b>Stray capacitance (guard common)</b>	130 pF typical at 1 MHz
- PGU channel
 

<b>Residual resistance</b>	3.4 $\Omega$
<b>Stray capacitance (relay off)</b>	5 pF typical
<b>Stray capacitance (open)</b>	700 pF typical (at 1 MHz $V_{in} - V_{out} = 0 \text{ V}$ )
<b>Signal transfer characteristics</b>	Overshoot < 5 % of pulse amplitude (at 20 ns leading and trailing time, 50 $\Omega$ pulse generator source impedance, 50 pF 1 M $\Omega$ in parallel load)

## Agilent 16445A Selector Adapter Specifications

Agilent 16445A Selector Adapter is the connection box required to transfer the control signal from the B1500A and apply DC power to the Agilent 16440A SMU/Pulse Generator Selector.

- Temperature Range
  - Operating** +5 °C to +40 °C
  - Storage** -20 °C to +60 °C
- Humidity
  - Operating** 20 % to 70 %RH, non-condensing
  - Storage** 20 % to 90 %RH, at +40 °C, non-condensing
- Power Requirement  
100 to 240 V, 50/60 Hz
- Maximum Volt-Amps (VA)  
20 VA
- Dimensions  
250 mm (W) × 50 mm (H) × 260 mm (D)
- Weight  
1.0 kg